



HIGH PERFORMANCE STROLLERS










Summit XC Single

**Amazing 360° Turns
Make For Extreme Maneuverability**

Assembly Instructions

*Read these
instructions carefully
before use and
keep them for
future reference.
Your child's safety may be
affected if you do not follow
these instructions.*

For the sake of your precious cargo, please read these warnings before using your stroller.

-  • **WARNING:** This stroller is not suitable for skating or roller blading.
 -  • **WARNING:** Prevent serious injury to your child by always using the safety harness.
 -  • **WARNING:** Parcels or accessory items, or both, placed on the unit may cause the unit to become unstable.
 -  • **WARNING:** Never leave your child unattended. Baby Jogger will not be held liable for accidents/injuries related to leaving your child unattended.
 -  • **WARNING:** Recommended weight for seat pocket is 2 lbs and basket is 10 lbs. Excessive weight may cause a hazardous unstable condition to exist.
 -  • **WARNING:** Stroller is not meant to be used for transporting children up or down stairs. Damage resulting to stroller will not be covered under warranty.
 -  • **WARNING:** Child may slip into leg openings and strangle. Never use in reclined carriage position unless safety harness is properly fastened.
- Accessories which are not approved by the manufacturer or distributor shall not be used.
 - The passenger shall remain seated (no standing in the stroller).
 - Watch out for cars – never assume that a driver can see you and your child.
 - Total weight load recommended for this stroller is 75 lbs / 34 kg (combined passenger and baggage weight).
 - This stroller seats one passenger.
 - It may be unsafe to use replacement parts other than those supplied or approved by the manufacturer.
 - Do not recline seat past point noted on recline label when running/jogging.
 - Do not run/jog with children under 6 months of age in stroller seat. Always check with your child's pediatrician before running/jogging with child in stroller.

The sample product shown in this manual may differ slightly from your production quality Summit XC. However, this will not affect the assembly or functionality of your Baby Jogger product.



WARNING: Ensure all locking devices are engaged before use.

Frame



- 1** Unpack stroller from box and set rear wheels aside.



- 2** Pull handlebar up and away from fork tips.



- 3** Lay stroller flat so that both ends are resting on the floor. The stroller frame will click and lock into place.



- 4** Turn stroller over.

To fold: Unsnap safety strap from frame and pull up on fold strap.

Front Wheel



1 To install front wheel, lay stroller back so the handle is resting on floor.



2 Align the round opening on the top of the front fork with the round metal peg underneath the foot plate. Slide the front wheel onto the metal peg until it clicks into place.




Front Wheel Locking Lever
*Turn to the left to lock front wheel.
Turn to the right for swivel action.*



To remove the front wheel, press down on the lever on the top of the front fork and slide the wheel off.

Rear Wheels

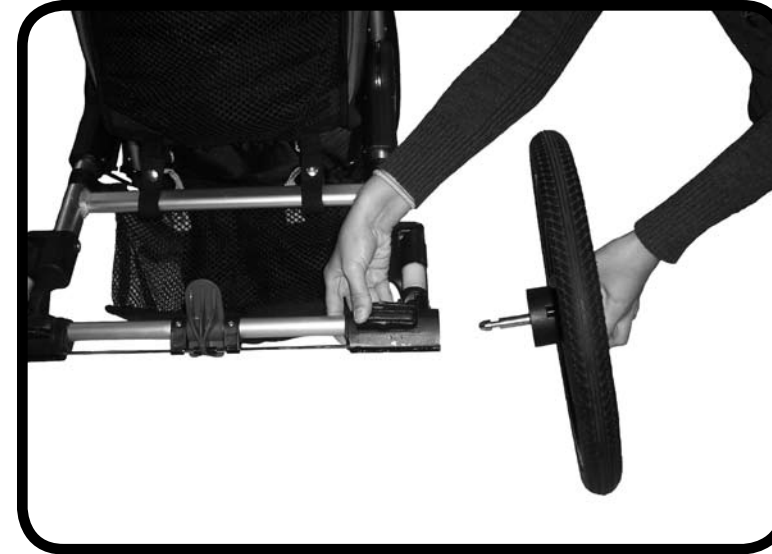

1 To install, gently slide the rear wheel's axle into the hole in the frame until the wheel clicks into place.



2 To remove, simply press the wheel button while gently sliding the wheel away from the frame.

Seat



WARNING: Always be sure the safety strap is securely snapped onto the frame before using stroller!



1 Secure seat fabric to frame by lining up snap placement on frame and fabric. Start at top snap and work your way down frame.



2 Secure seat straps around the bottom of the frame, behind the front wheel. Thread one seat strap through the D ring of the other strap, and fasten both Velcro sides firmly together.



3 Secure safety straps to both sides of the frame before use.



4 Be sure that fold strap rings are secured to the frame before use.



To fold stroller: Remove child from seat. Unsnap safety straps from frame and pull upwards on the fold strap with a gentle tug.

Reclining Seat



1 *To recline:* Pinch the clamp behind the seat, and slide it down to desired recline. Pull seat down on both sides to match recline position of clamp.



WARNING: Do not recline past point noted on recline label when running/jogging.



WARNING: Do not run/jog with children under 6 months of age in stroller seat. Always check with your child's pediatrician before running/jogging with child in stroller.



- *Weather Cover:* If desired, pull weather cover down and over the seat back mesh. Secure firmly over both sides of seat. When not in use, roll weather cover up and fasten with elastic loop and barrel provided under top of the seat fabric.

Reverse steps to return to the upright position.

Safety Harness



WARNING: Always use the crotch strap in combination with the shoulder straps and waist belt.



1 Unclip top of shoulder strap from the seat and re-clip on the pair of seat loops closest to your child's shoulder height.



2 To adjust the shoulder and crotch strap length: Remove the shoulder pads and slide the plastic guide up or down to lengthen or shorten.



3 To buckle the harness: Simply push side buckle into center buckle until it locks into place.

To unbuckle: Push one side of the center button and pull the corresponding side buckle away from the center buckle. Repeat to unbuckle other side.



WARNING: The shoulder straps must be over the child's shoulders and the lap belt section must be over the child's lap. The harness must be tightened so that the child is fully restrained yet comfortable. As a guide, you should be leaving a gap of no more than two finger widths between the harness and the child's body.

Brake




WARNING: Engage parking device before loading and unloading passenger.



• Simply push brake pedal down to engage rear parking brake and lift up to release.

Hand Brake

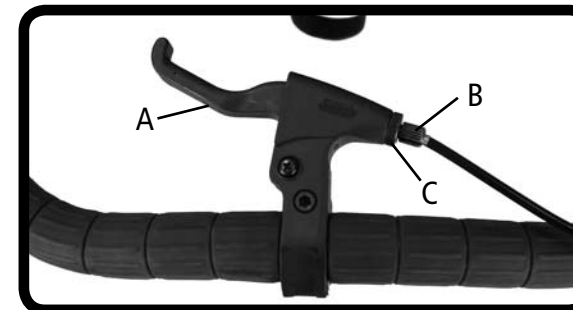

• Your stroller is equipped with a hand brake for your jogging convenience.

Adjusting the hand brake: If you do not have good braking action, simply squeeze the brake handle (A) five or six times. If the problem persists, loosen the brake's cylinder ring (B) to adjust the small ring (C) and then move the small ring away from the handle to tighten the cable. (Please do not over tighten!) To lock the rings, tighten the cylinder ring (B) against the handle while holding the small ring (C) in place.



1 To use the hand brake make sure brake pads are properly installed (see page 3). Squeeze the hand brake to give you better control over your stroller while jogging or running.



2 To rotate the hand brake's position on the handle bar, loosen the bolt using the supplied Allen wrench. Rotate the hand brake assembly on the handlebar until it is in a comfortable position. Tighten the bolt to secure hand brake.

Canopy



1 To attach bracket to frame: Unsnap seat from frame to reveal mounting location. Use a Phillips head screwdriver to attach bracket screws to frame.



2 To attach canopy to bracket: Insert canopy frame into bracket and attach screws using a Phillips head screwdriver.



3 Wrap straps around frame and snap together.



4 Velcro canopy strap around frame to itself.

Basket



1 Velcro front basket straps around frame tube. Front of seat will need to be turned up to access frame tube.



2 Wrap rear basket straps around upright and snap together.

NOTE: The rear of basket has the mesh material and the front does not.

Accessory Bracket Adapter



Accessory bracket adapter allows for easy use of accessories

Quick Fold Technology

Simple Lift & Fold (Patented)



To fold stroller: Remove child from seat. Remove safety straps from frame. Pull upwards on the fold strap with a gentle tug.



WARNING: Always be sure the safety strap is securely snapped onto the frame before using stroller!

In Motion

Steering

- Steering your stroller is simple: It is balanced to turn with just a light touch on the handlebar without having to lift the front wheel.

In the Dark

- Since we are concerned about the safety of you and your child, we recommend that you not use your stroller at night. However, if you choose to, please attach reflective strips to the wheels and the seat. Bicycle lights can also be mounted on the handle crossbar. These accessories can be found at most bike stores.

Maintenance

- To preserve the longevity of your stroller, it is important to perform simple, regular maintenance. It is necessary to regularly check that the air pressure in your stroller's tires is the same P.S.I. that is printed on the wheel rim. From time to time, make sure that the joints and folding areas are still in good condition. If you hear any squeaking or feel tension, you can take your stroller to a local bike shop for added lubrication. All repairs should only be carried out by an authorized dealer.

Stroller Care

Washing

- You can machine wash your stroller's seat in cold water with a mild detergent. To minimize shrinkage, simply reattach the seat to the frame to dry. (Please do not put the seat in the dryer!)
- Be sure to remove the frame from the back of the seat before washing.



Wheel Care

- The wheels can be cleaned using a damp cloth. They will need to be dried completely with a soft towel or cloth.

Storing

- Sunshine can fade seat fabric and dry out tires, so storing your stroller indoors will prolong its good looks. However, if you do store it outside, using a tarp will help protect against weather wear.

WARRANTY REGISTRATION ON-LINE AT www.babyjogger.com/register

Baby Jogger's Limited Lifetime Warranty:

Baby Jogger warrants that the frame is free of manufacturer defects for the lifetime of the product. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect
- Commercial Use
- Improper storage/care of the unit
- Accidents or injuries related to leaving your child(ren) unattended

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

E-MAIL: customerservice@babyjogger.com

CALL: 1-800-241-1848 between 8am – 6pm EST, Mon. – Fri.

FAX: 1-804-262-6277

MAIL: BABY JOGGER COMPANY
8575 Magellan Parkway
Suite 1000
Richmond, VA 23227

Thank You!

We wish you many happy journeys with your new stroller! Your stroller is a great product, and we are proud to manufacture it. If you have any questions or comments, please give us a call at:

1.800.241.1848



H I G H P E R F O R M A N C E S T R O L L E R S

Baby Jogger is a Division of Dynamic Brands

8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227
T: 800.241.1848 • F: 804.262.6277 • www.babyjogger.com